



## **Set Up Instructions**

**Before Starting:** Install two fresh AAA batteries into the EasyMote (batteries are not included).

EasyMote is pre-programmed to work with most LG TVs, but it will work with any TV when programmed using one of the two methods below.

### **Method 1: Quick Search**

The quick search function will search through common TV codes incrementally as you press the 'CH+' button.

This method will work with MOST TVs, but not all TVs. If you cannot find a code that works, or if you have a Set Top Box (Foxtel, Fetch, Sky etc.) please use "Method Two" below.

1. Ensure that your TV is powered on.
2. Press and hold the 'Mute' and 'CH+' buttons for five seconds. The indicator light next to the 'Power' button will turn on. Release both buttons.
3. Press the 'CH+' button. Each time you press it, it will cycle to the next TV remote code and the LED indicator will flash.
4. When the station on your TV changes, you have reached the correct code. Press the 'Mute' button to save the setting. Note: there are hundreds of codes, so you may need to cycle through many codes, especially on less common TV brands.
5. Verify that all buttons are performing their desired function. If they are not, repeat steps 2 - 4 until you find a code that works for all functions.

### **Method 2: Learning Mode**

The EasyMote is capable of learning functions from other remotes. If using the EasyMote to control more than one device, such as a TV and a Cable Box, you will need both devices' original remotes to teach the commands.

**Scan the QR code to see a video on how to perform Method Two >>**



1. Find the original remote that works with your TV (or Set Top Box). Test it to make sure it is currently operational and has working batteries.
2. Press and hold the 'Mute' and 'VOL+' buttons on your EasyMote until the indicator light next to the 'Power' button illuminates. It is now ready to learn commands from the source remote.
3. Point the front of the EasyMote at the front of the source remote and keep them within 5cm of each other. **TIP:** make sure you're **NOT** in a brightly lit room and turn off any florescent lights, as they can interfere.
4. Press the desired function key on the source remote you wish to teach the EasyMote. The indicator light on the EasyMote will begin to flash.
5. On the EasyMote, Press and hold the corresponding key you wish to apply this command to for two seconds. The indicator light will stop flashing but remain illuminated after successfully applying.
6. Repeat steps 4 - 5 for any additional functions you wish to teach the EasyMote.
7. When you are finished teaching the EasyMote, press the 'Mute' and 'VOL-' buttons. The indicator light will extinguish, and programming will be saved.

Note: If no key is pressed within 25 seconds on the EasyMote, the learning process will exit without saving.

### **Reset To Default Settings**

1. Press and hold the 'Power' and 'Mute' buttons until the LED indicator illuminates.
2. Press the 'Mute' button once. The LED light will flash four times then extinguish. The remote is now reset.

### **Change Backlight Behaviour**

1. Press and hold the 'Mute' and 'CH-' buttons until the LED indicator flashes three times. The Backlight will extinguish.
2. Repeat step one to re-enable the backlight.