

ADJUSTING THE TB4 ARMS



ADJUSTING THE TB4 ARMS

- Quick minor Adjustments
- Major adjustments over 1 inch
- Width Adjustment
- Reference Markings

QUICK MINOR ADJUSTMENTS


- Make note as to if armrest needs to go up or down in height.





QUICK MINOR ADJUSTMENTS

- Flip back the arms till it stops **to** see where it stops.

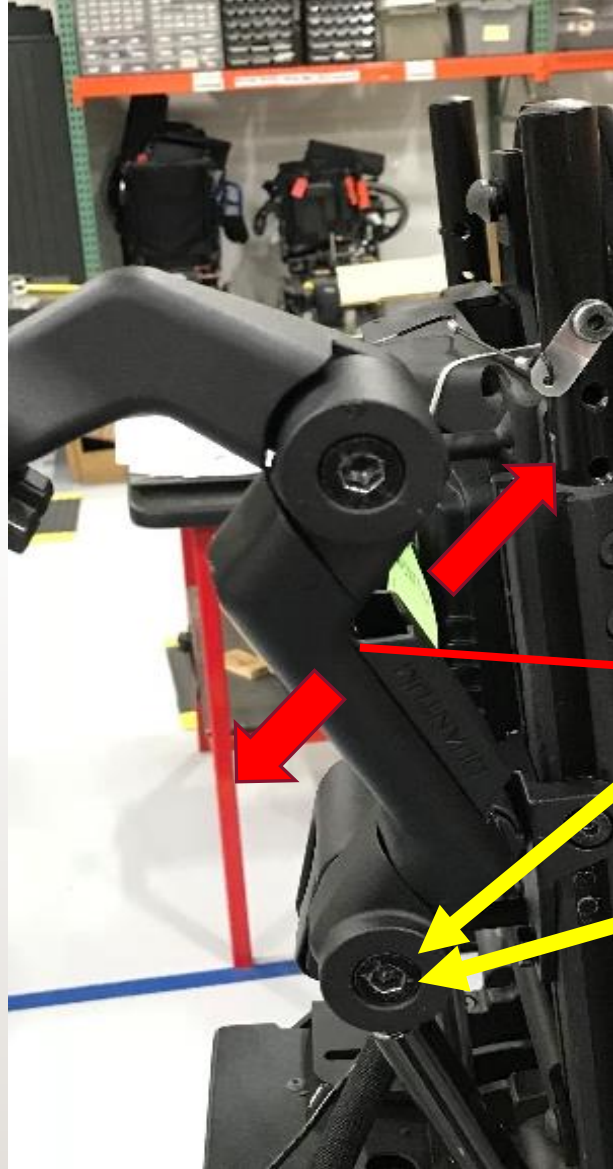


QUICK MINOR ADJUSTMENTS


- Loosen bolt
- Position the arm the amount you think it needs to go up or down
- Tighten when you think its in position

QUICK MINOR ADJUSTMENTS

- Drop arm down and check for correct height
- Repeat previous steps till correct height

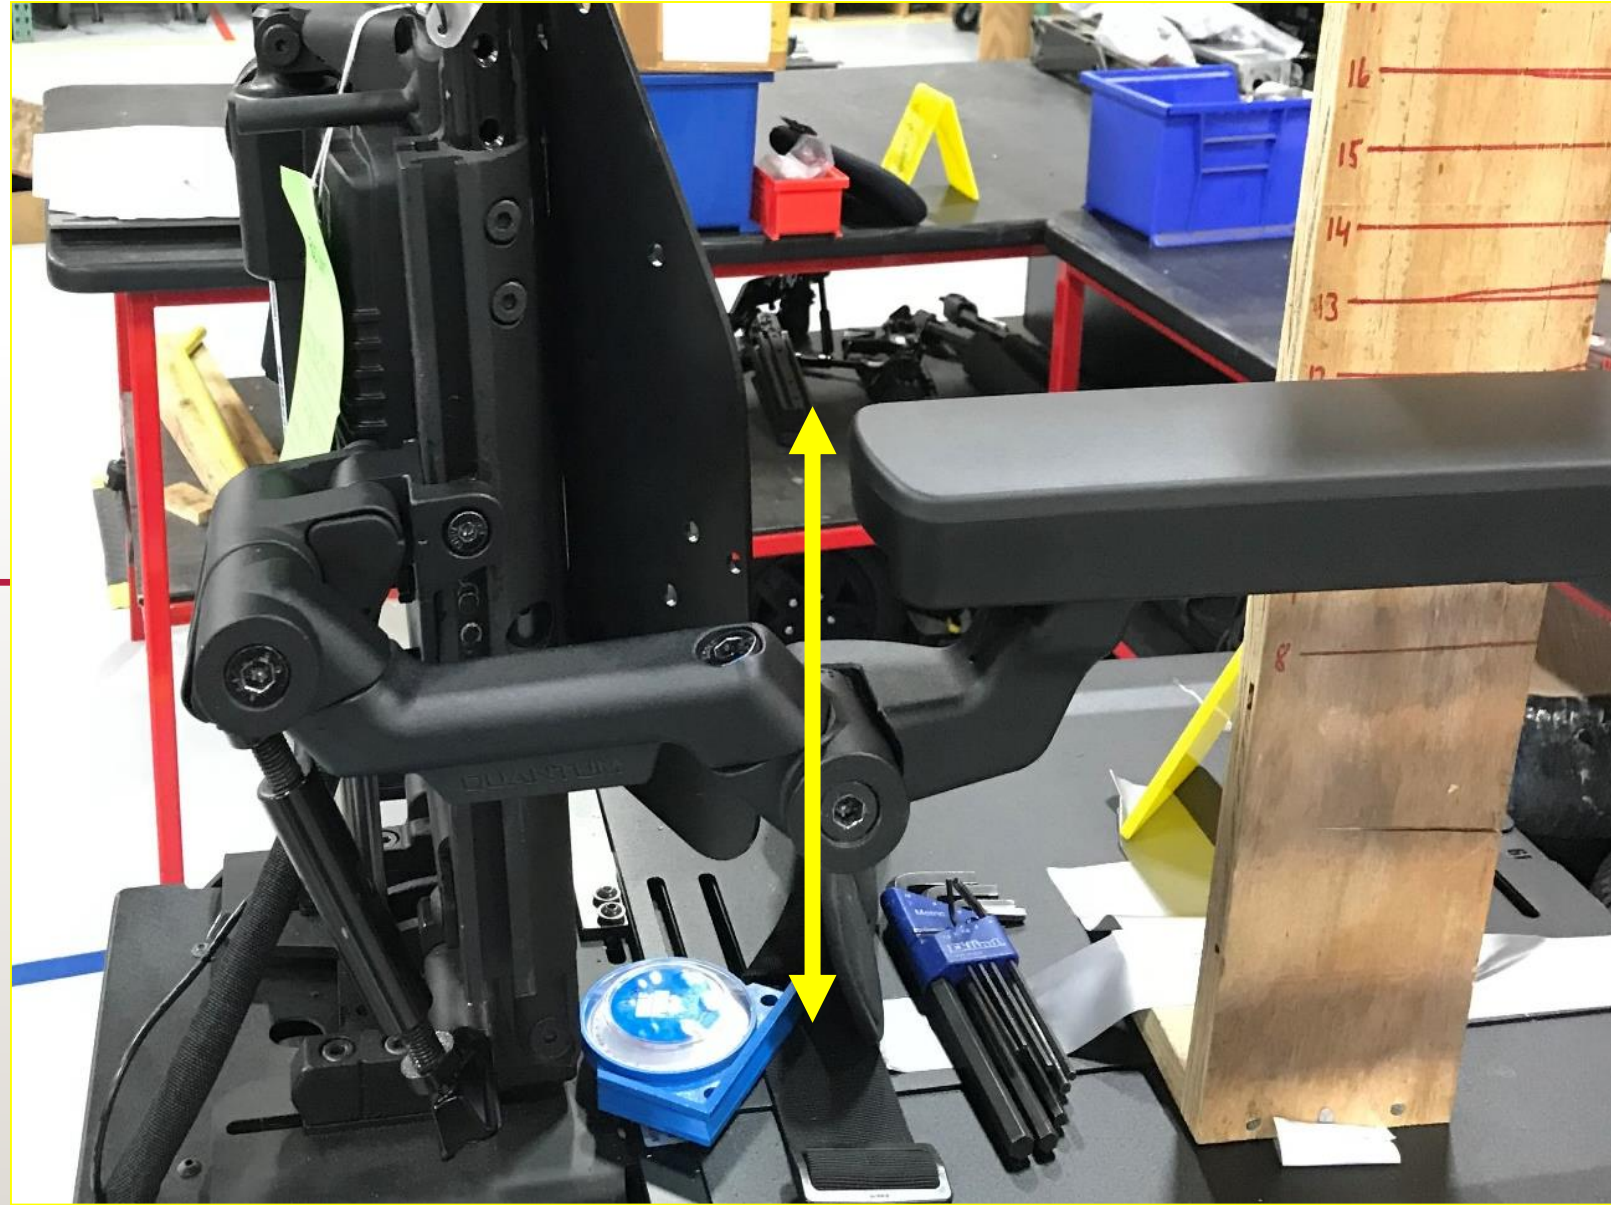


QUICK MINOR ADJUSTMENTS

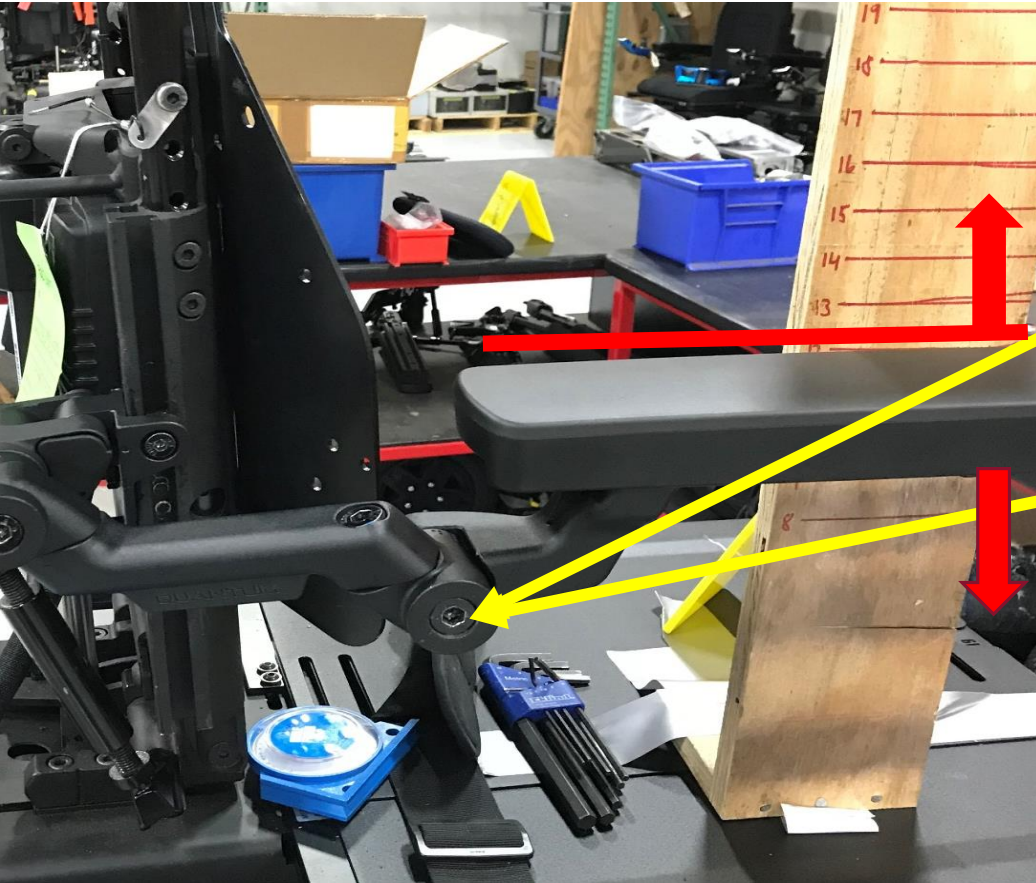

- This will adjust the angle of arm pad section on
- You can now make your angle adjustments
 - Loosen bolt
 - Adjust angle of arm pad
 - Tighten bolt
- Repeat Steps to get correct angle

QUICK MINOR ADJUSTMENTS

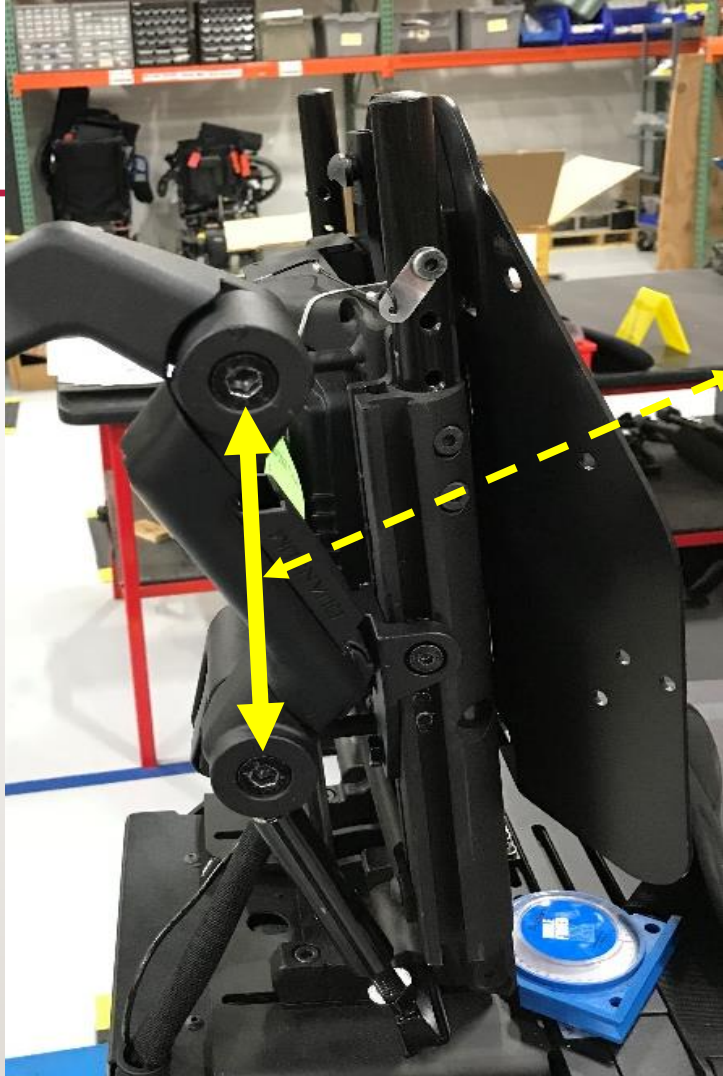

- Please make note of the finished angle of the arm after you make adjustments
- This angle must be **beyond** 90° so the arms do not fall forward

QUICK MINOR ADJUSTMENTS

- This fisheye on the **pillow block** must be equal to or higher than the mark on the post to keep maximum spring tension to help arms stay flipped back
- Fish eye
- Mark on post



MAJOR ADJUSTMENTS OVER 1 INCH HEIGHT ADJUSTMENT



MAJOR ADJUSTMENTS OVER 1 INCH OF HEIGHT ADJUSTMENT

- If you need to lower or raise the armrest over an inch you will need to move the pillow block
- Make sure you measure how much lower or higher you need to move the armrest
 - Tip if you see where the point of the elbow rests naturally that's a good starting point to move your armrest to.



MAJOR ADJUSTMENTS OVER 1 INCH

- Use the Hash marks on the back of the Seating system to see where your starting point is



MAJOR ADJUSTMENTS OVER 1 INCH

- First you will want to loosen the side bolt, **loosen not take off**




MAJOR ADJUSTMENTS OVER 1 INCH

- You will then need to loosen the 2 bolts under the Pillow block, **loosen not take off**
- You will need to use an open ended wrench.




MAJOR ADJUSTMENTS OVER 1 INCH

- After you loosen the 3 bolts, crack the Locking Nuts to let the turnbuckle Spin freely

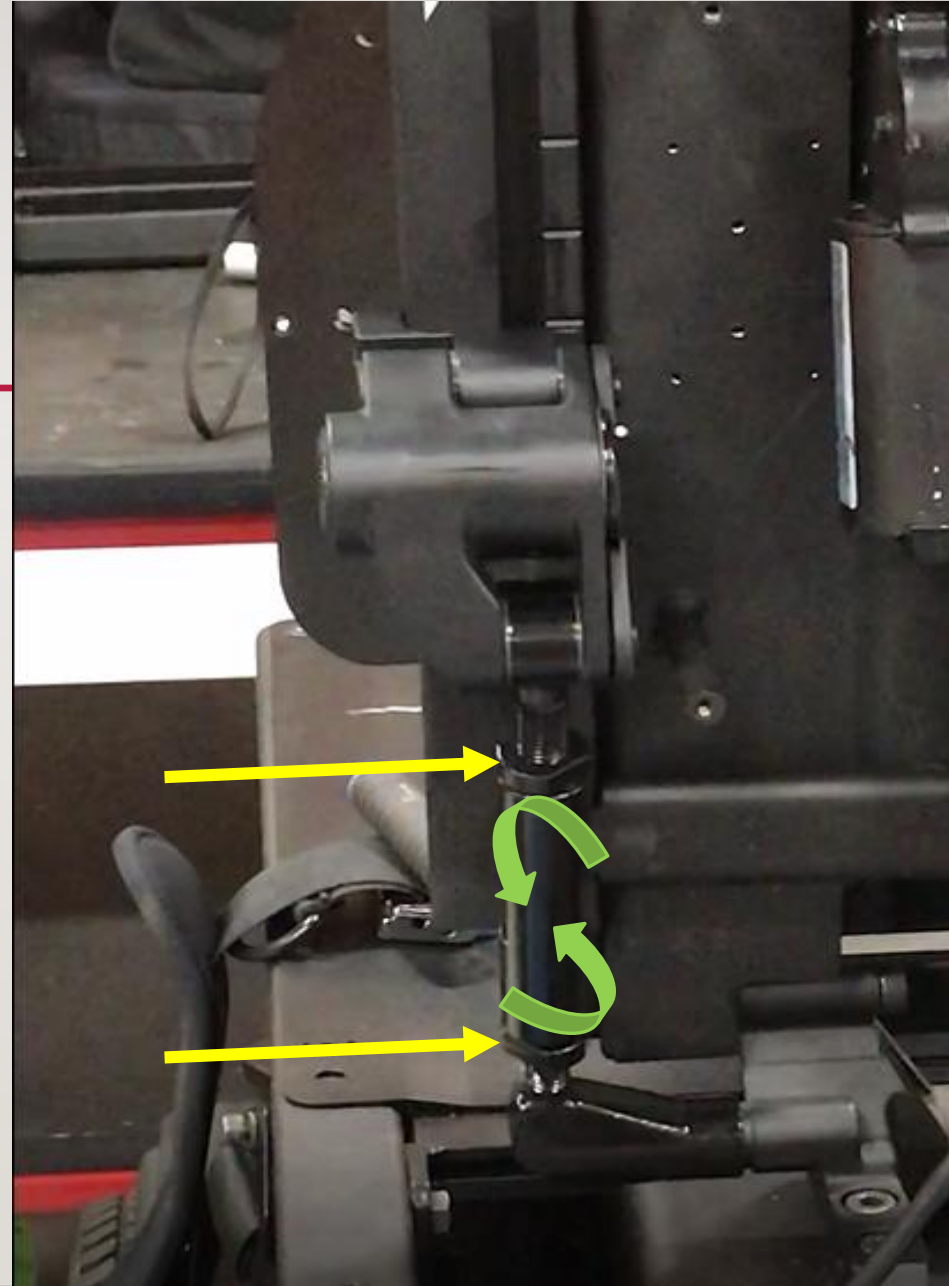

MAJOR ADJUSTMENTS OVER 1 INCH

- Lower or raise the Pillow Block to desired position
- You can also turn the turnbuckle to raise and lower the Pillow block
- The arm rest can go from 8-16" from the seat pan

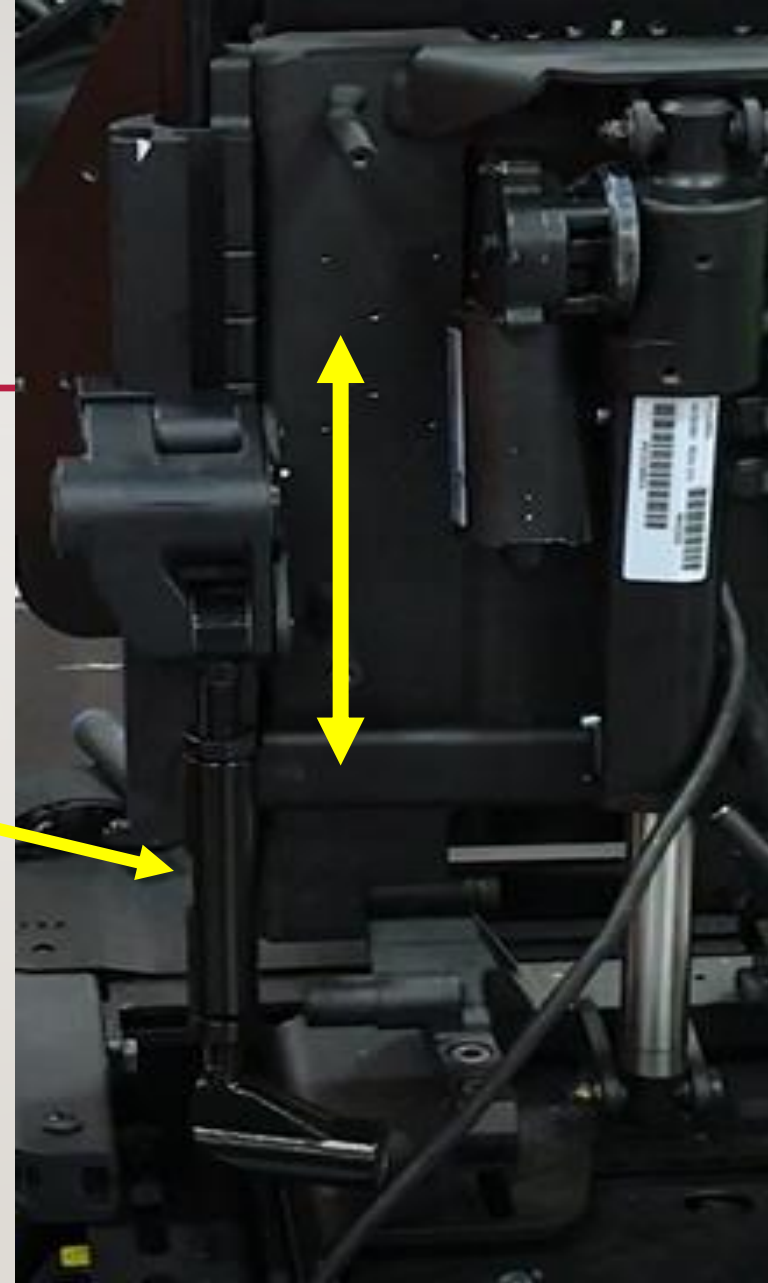

MAJOR ADJUSTMENTS OVER 1 INCH

- Tighten bolt when you get to desired height



MAJOR ADJUSTMENTS OVER 1 INCH

- You will then need to tighten the 2 bolts under the Pillow block
- You will need to use an open ended wrench
- Do not forget to tighten the side bolt as well.



WIDTH ADJUSTMENT



WIDTH ADJUSTMENT

- Starting at the rear under bolt, loosen to desired with
 - You can lift armrest to access
 - Tighten after desired width
- Do not worry about arm pad being at a wrong angle yet




WIDTH ADJUSTMENT

- After adjusting to desired width, loosen front Bolt
- Adjust angle of arm pad to desired angle.




WIDTH ADJUSTMENT


- Once Angle is reached tighten front Bolt

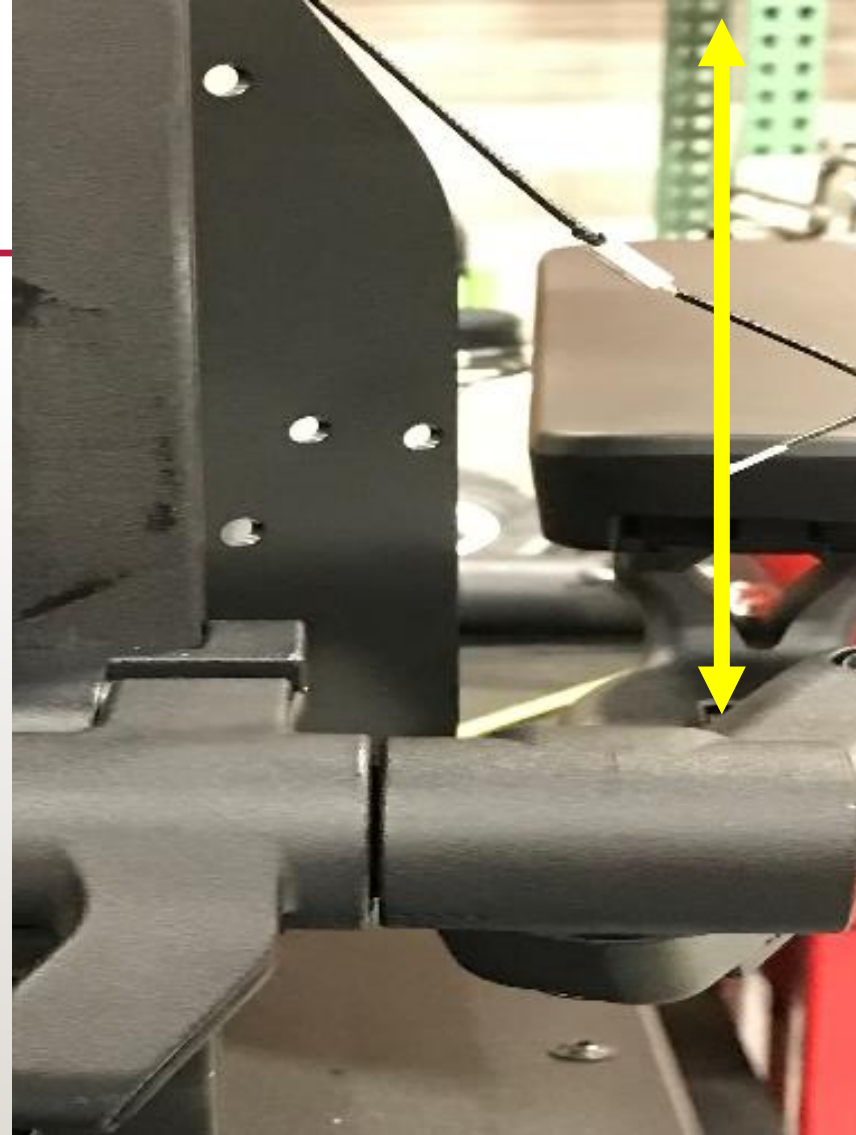

REFERENCE MARKINGS

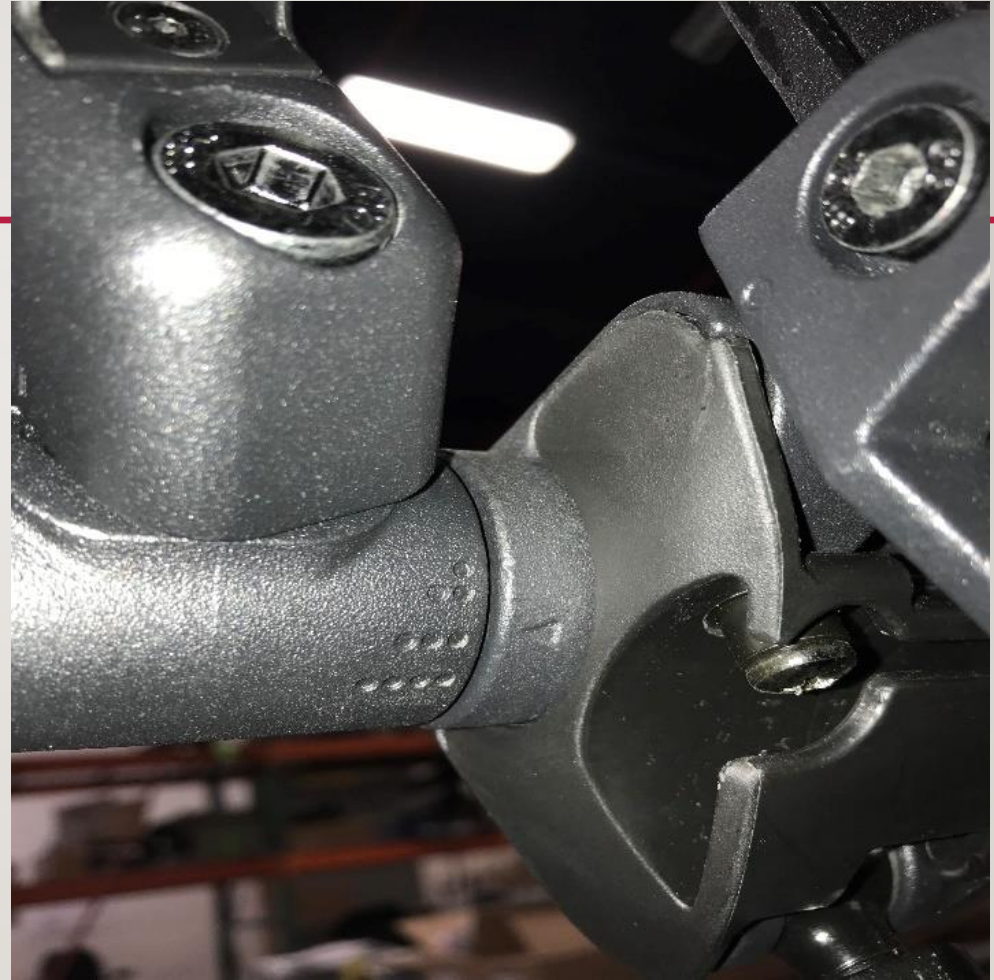


REFERENCE MARKINGS

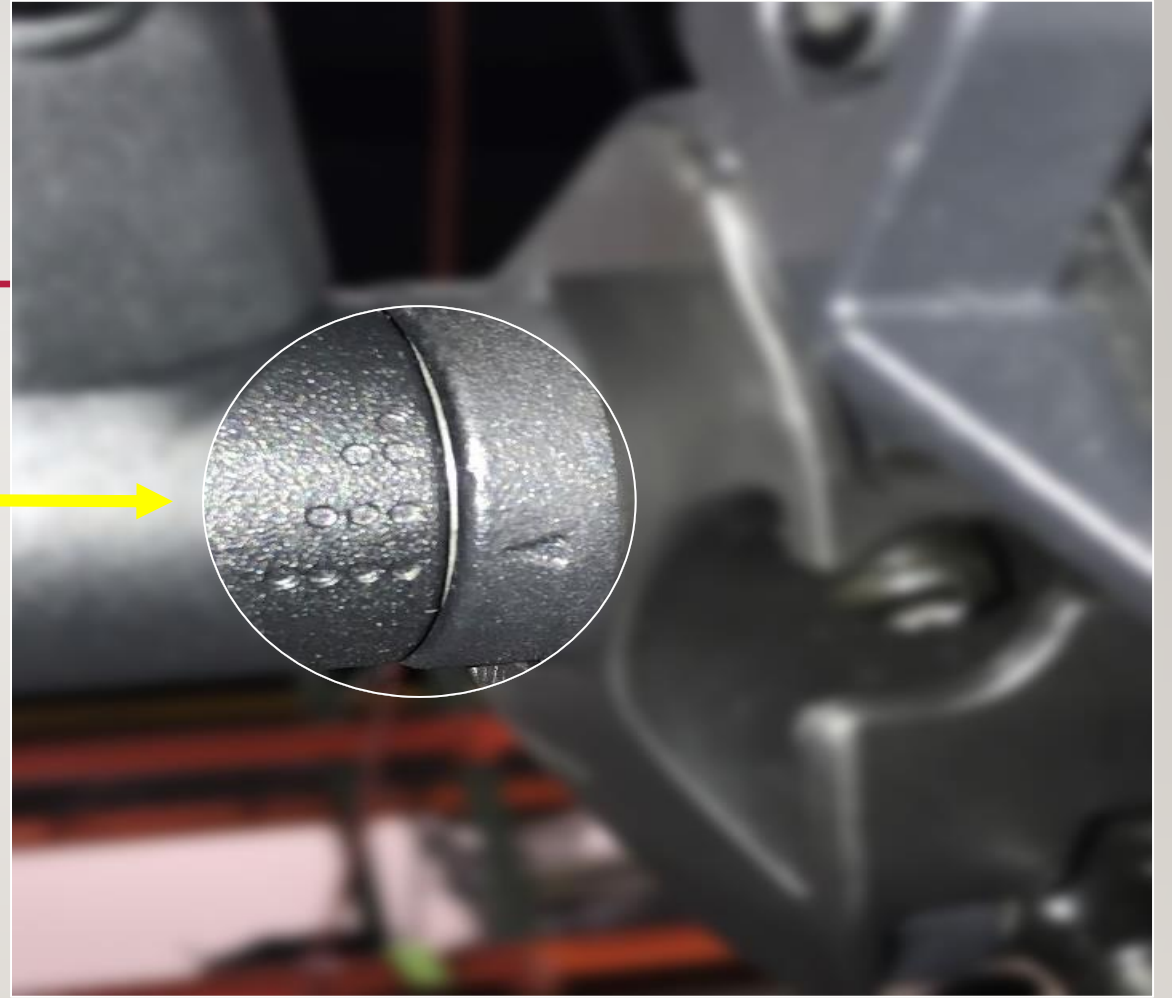

REFERENCE MARKINGS

- These marks help determine if your arms are at same positions
- Check that the markings on both sides of the wheelchair match.

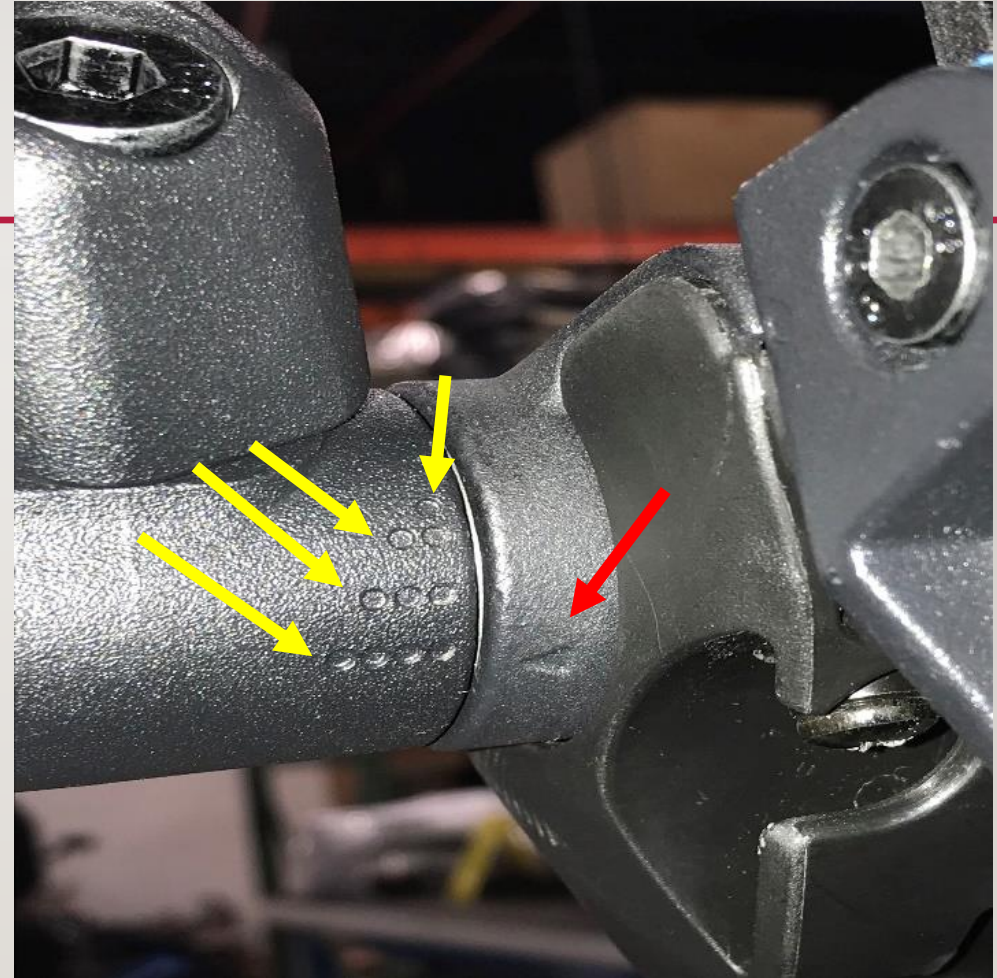

REFERENCE MARKINGS

